

# Assembly Instructions and Parts List 22-1/2" Bed Extension for JWL-1221VS Lathe

Stock No. 719201



# **AWARNING** Read and understand the entire owner's manual that accompanied your JWL-1221VS lathe before attempting assembly or operation of accessories.

Inspect contents for shipping damage. Report any damage or part shortages to your distributor. Do not discard shipping materials until accessory is set up and functioning properly.

### **Shipping contents**

- 1 Bed extension
- 2 Socket head screws, 5/16x1
- 2 Lock washers, 5/16x1
- 2 Flat washers, 5/16x1
- 1 Positioning plate
- 1 Pan head screw, 1/4x1/2

#### Tools required for assembly

6mm hex key ("Allen wrench") Cross point screwdriver

# Assembly

(Parts in brackets refer to index numbers in the exploded view.)

- 1. Use the pan head screw [1] to attach plate [2] to end of bed extension [3] where the beds will meet.
- 2. Place bed extension against lathe bed and hold in place with the plate [2].
- 3. Insert two socket head screws [6], lock washers [5] and flat washers [4]. Align beds as closely as possible, then snug the screws but do not fully tighten yet.
- 4. Move tailstock over the seam of lathe bed and bed extension and align the clamping nut in the center where the beds meet. (Shift bed extension as needed until tailstock can slide onto it). Tighten tailstock clamping lever – this will properly align and make flush the beds.
- 5. Tighten both socket head screws [6].
- 6. Unlock tailstock, and slide it back and forth across seam to verify smooth travel.

JET 427 New Sanford Road LaVergne, Tennessee 37086 Ph.: 800-274-6848 www.jettools.com


Part No. M-719201 Revision A1 02/2014 Copyright © 2014 JET

# **Specifications**

| Stock number |  |
|--------------|--|
|              |  |
|              |  |
|              |  |
|              |  |
| - 11 0 - 0 - |  |

Specifications were current at time of publication, but because of our policy of continuous improvement, JET reserves the right to change specifications at any time and without prior notice, without incurring obligations.

## # 719201 Bed extension (22-1/2") for JWL-1221VS lathe

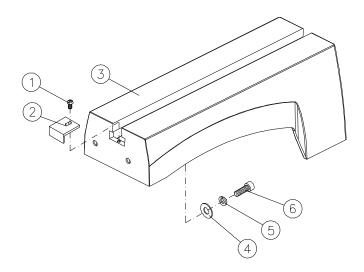

| Index No Part No | Description                       | Size        | Qty |
|------------------|-----------------------------------|-------------|-----|
|                  | . Phillips Pan Head Machine Screw |             |     |
|                  | . Plate<br>Extension Bed          |             |     |
|                  | . Flat Washer                     |             |     |
| 5 TS-0720081     | . Lock Washer                     | 5/16"       | 2   |
| 6TS-0208061      | . Socket Head Cap Screw           | 5/16"-18x1" | 2   |

To order parts or reach our service department, call 1-800-274-6848 Monday through Friday (see our website for business hours, www.jettools.com). Having the Model Number and Serial Number of your machine available when you call will allow us to serve you quickly and accurately.